

THDM Shell Size 23 Cleaning Procedures



(THDMP-F8xxx/THDMC-F8xxx)

1.) Install cleaning insert (MTXB-IAP-R) or (MTXB-IAP-P) into connector.



CLEAN INSERT BEFORE USE



OR

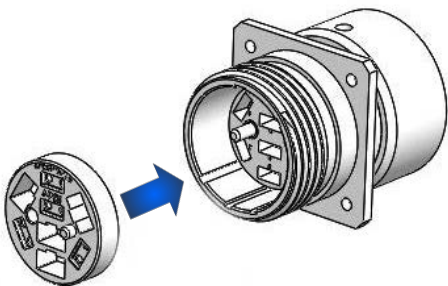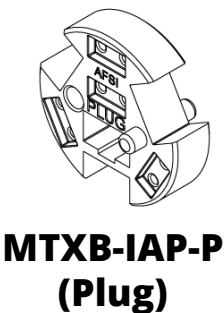

2.) Inset the cleaner (IBC In Bulkhead Cleaner, One-Click, Neoclean, etc.) into the insert and push **2 Times (2X)** per MT ferrule/position.

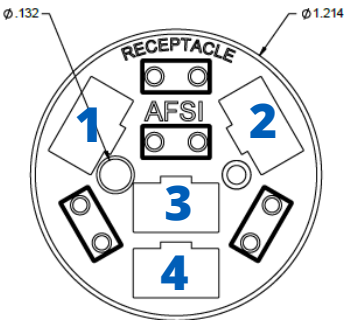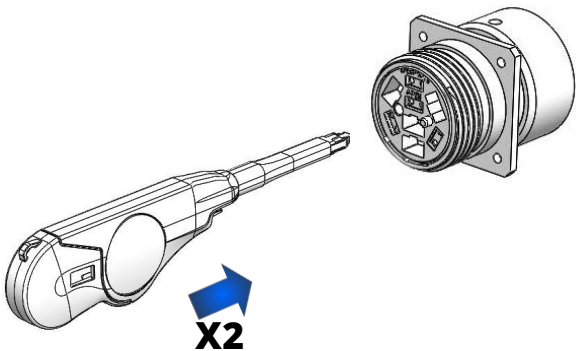

****Blue numbers indicate number of positions in no particular order****

3.) Remove and rotate the insert 180° and repeat step 2.

